



INSTALLATION INSTRUCTIONS

FOR ALL FIXTURE RUNS LOCATE AND REVIEW AN It is recommended to locate and lay out all components for each fixture "run". A fixture run typically consist of endcaps, joiners, canopy kits, lengths of housings with diffusers, and lengths of gear trays (satellite - direct, satellite indirect and master). BE SURE TO IDENTIFY ALL CORRECT LENGTHS FOR EACH FIXTURE RUN.


Step 1&2: Turn off Power before Installing.

Remove diffusers from housing and lay off to the side (ensure diffusers are stored in a place where they will not be damaged). Mount 4" junction box and suspension canopy in ceiling in accordance with drawing below. Suspension holes (1/4") and power feed hole (7/8") are pre-drilled into housing, canopy ceiling spacing is equal to suspension hole spacing on fixture(s). 0.3<u>5</u>" **Power feed cables**

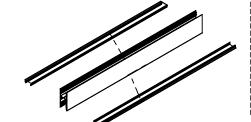


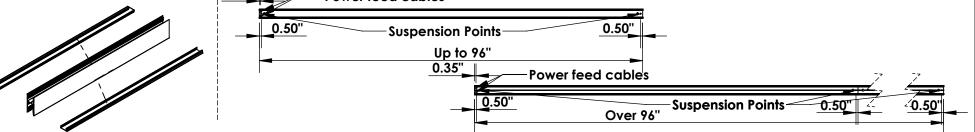


Step 3 & 4: Make wire connections in junction box and drop down feed power cable. Mount cross bar to junction box. Insert aircraft cable through coupler and attach to cross bar with threaded rod. Repeat this step for non-power suspension point. Install cable gripper from suspension kit to locations on top of housing using supplied hardware from suspension kit. Insert aircraft cable into power feed housing to suspend it at both locations. Adjust suspension to level the housing.

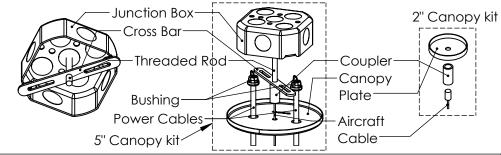


Step 5: (If single housing skip this step) Place one straight joiner on each side of housing as seen below. Tigthen set screws using allen key.

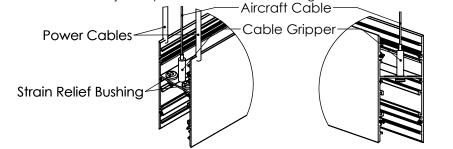

Step 6: (If single housing skp this step) Insert airfcraft cable into cable gripper on next housing. Then, slide joiners across housing seam so they are joining both housings. Tighten set screws on joiners. Repeat steps 5-6 until all housing are installed and leveled

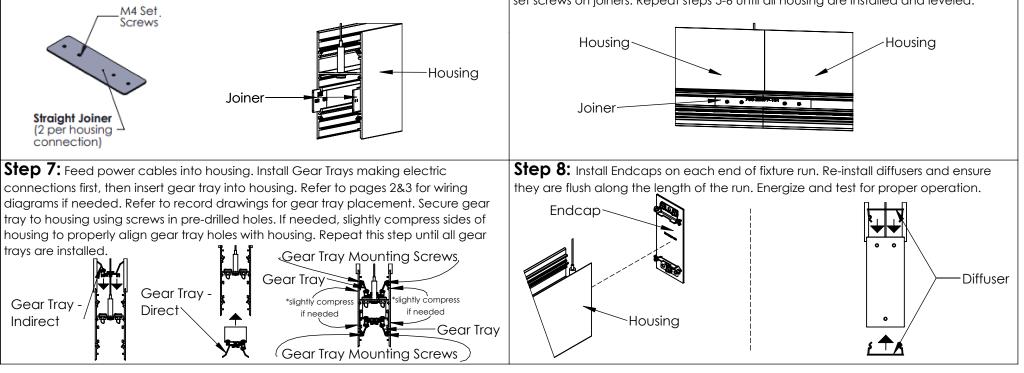


PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF **Inter-lux**. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITEN PERMISSION OF **Inter-lux** IS PROHIBITED. Phone: (410)381-1497 Web: www.inter-lux.com SHEET 1 OF 3 interolux *Inter-lux reserves the right to make changes to this product and related installation instructions at any time without prior notice DRAWING NOT TO SCALE REV N/C

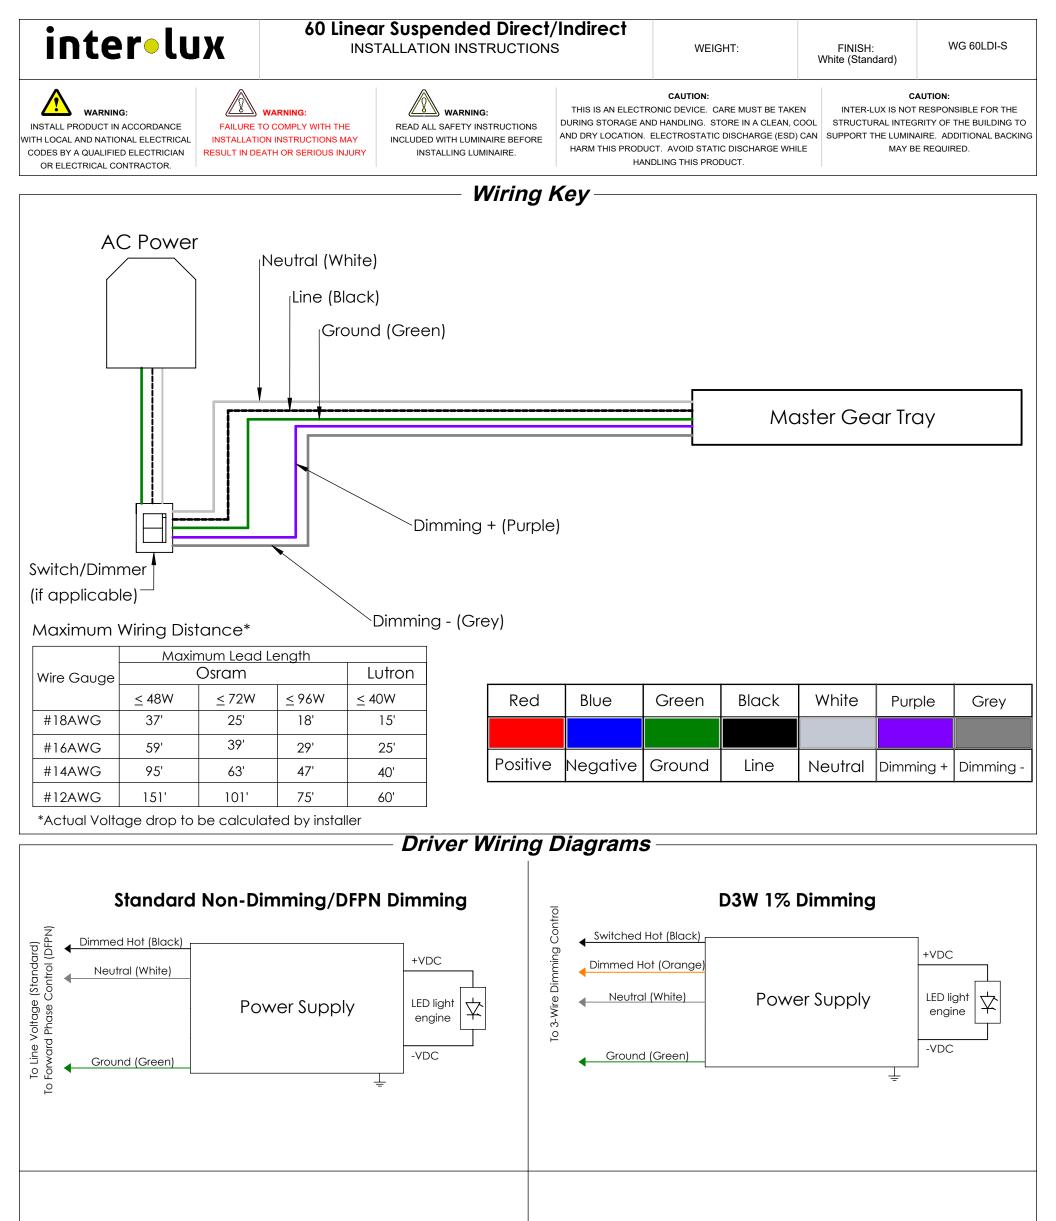


DES 1% Dimming


0-10V Dimming

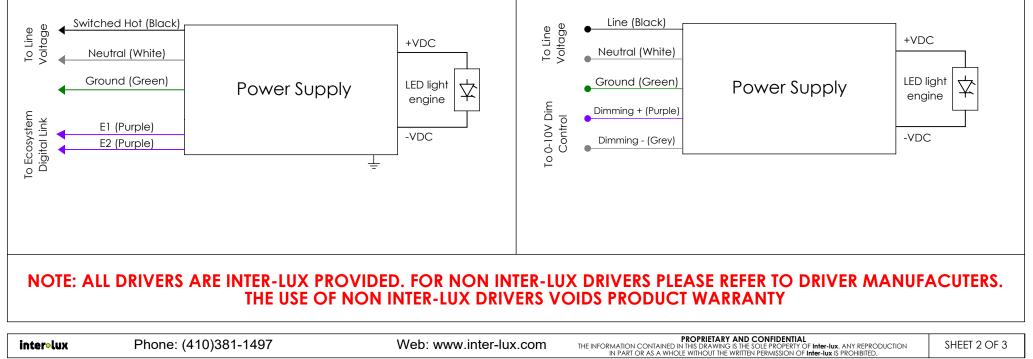

*Inter-lux reserves the right to make changes to this product and related installation instructions at any time without prior notice.

DRAWING NOT TO SCALE REV N/C

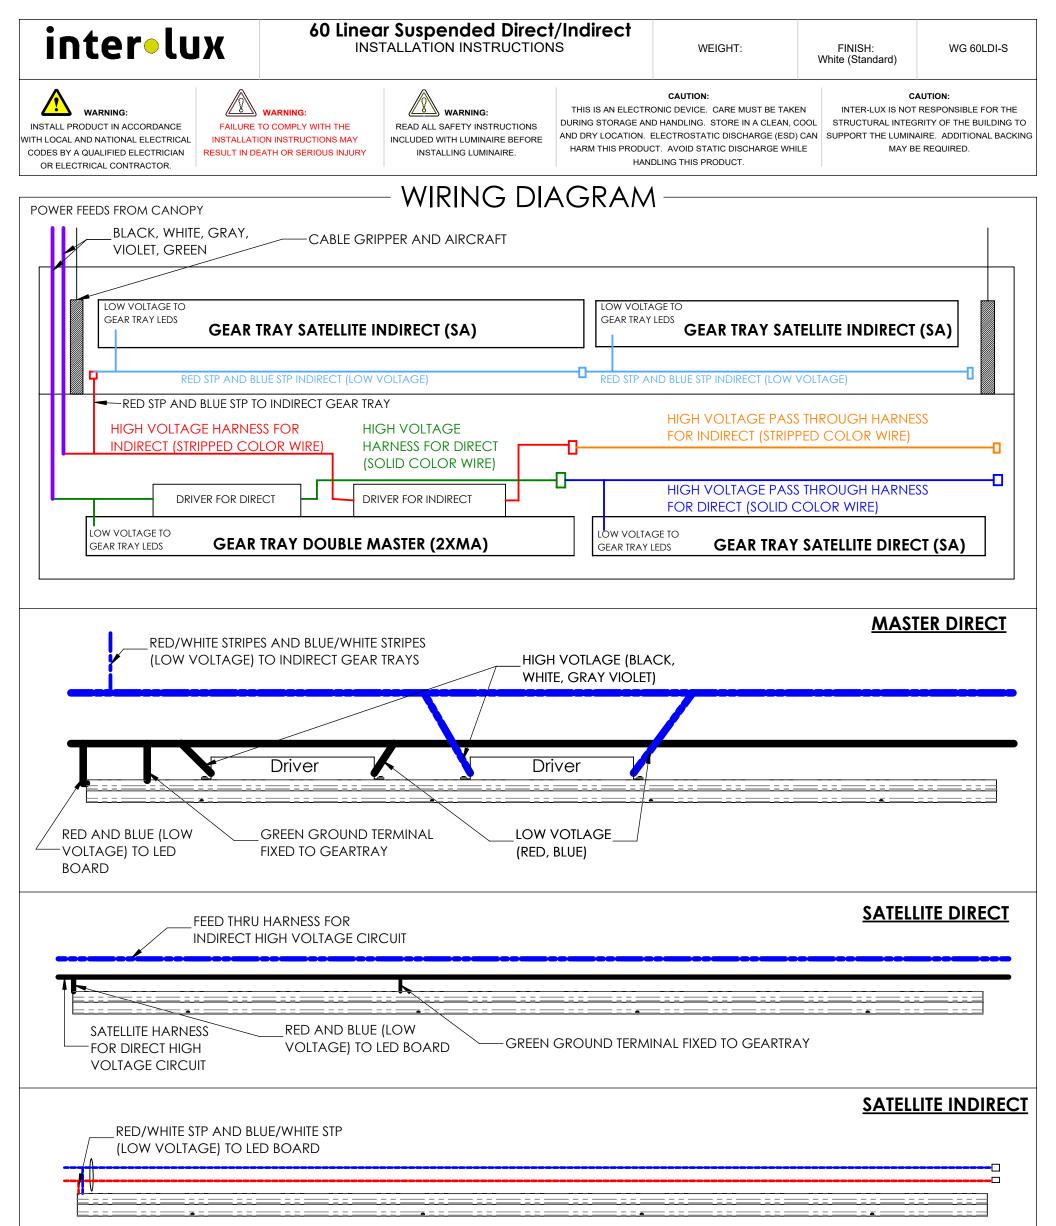

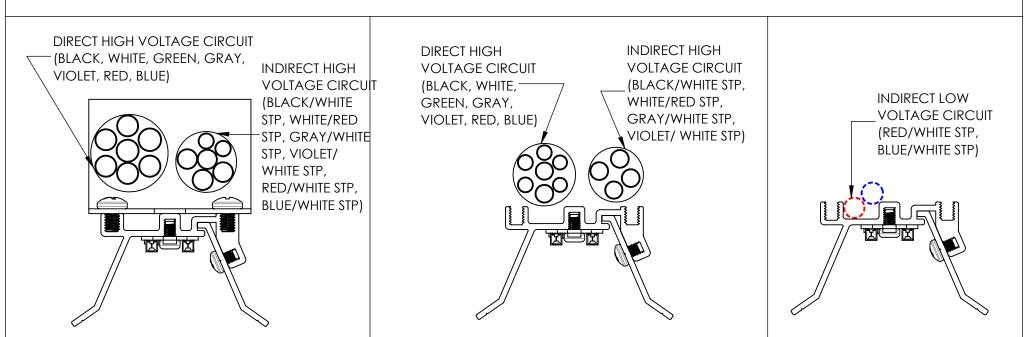

inter•lux	Phone: (410)381-1497	Web: www.inter-lux.com	PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF Inter-Iux. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF Inter-Iux IS PROHIBITED.	SHEET 3 OF 3
*Inter-lux reserves the right to make changes to this product and related installation instructions at any time without prior notice.			DRAWING NOT TO SCALE REV N/C	