


Whitegoods 20 Linear Surface

INSTALLATION INSTRUCTIONS

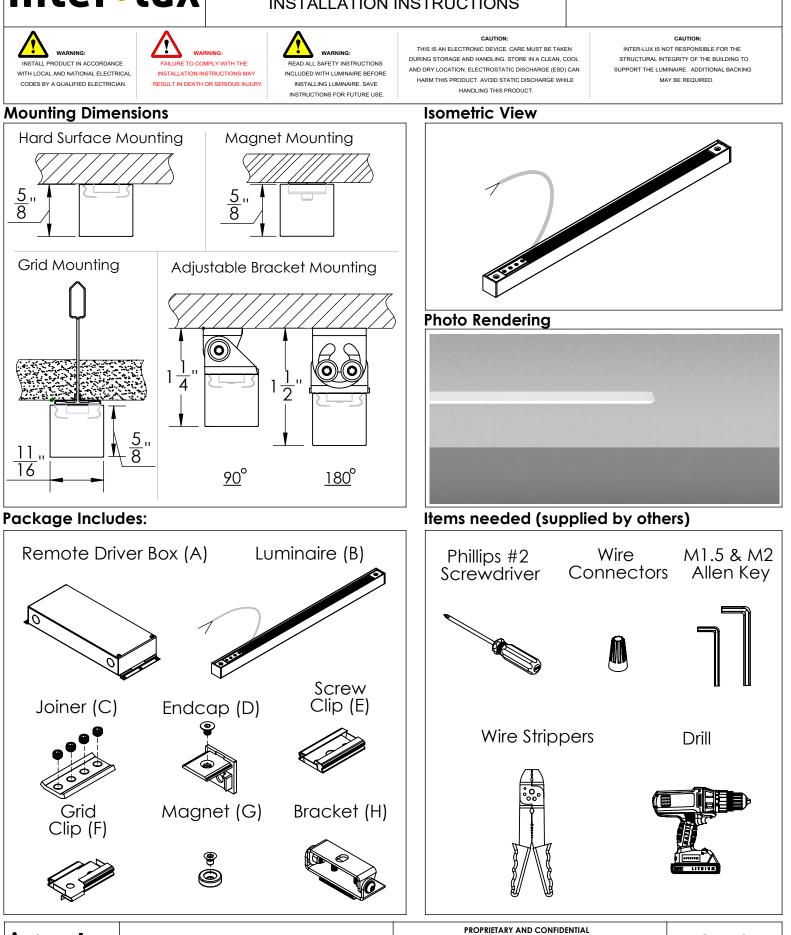

inter-lux.com

410-381-1497

inter•lux

PAGE 1 OF 5

940-SM20LDL

WG 20LDL-SM



Whitegoods 20 Linear Surface INSTALLATION INSTRUCTIONS



READ ALL SAFETY INSTRUCTIONS INCLUDED WITH LUMINAIRE BEFORE INSTALLING LUMINAIRE, SAVE INSTRUCTIONS FOR FUTURE USE

THIS IS AN ELECTRONIC DEVICE. CARE MUST BE TAKEN DURING STORAGE AND HANDLING. STORE IN A CLEAN, COOL AND DRY LOCATION. ELECTROSTATIC DISCHARGE (ESD) CAN HARM THIS PRODUCT. AVOID STATIC DISCHARGE WHILE HANDLING THIS PRODUCT


CAUTION:

CAUTION: INTER-LUX IS NOT RESPONSIBLE FOR THE STRUCTURAL INTEGRITY OF THE BUILDING TO SUPPORT THE LUMINAIRE. ADDITIONAL BACKING MAY BE REQUIRED

DRAWING NOT TO SCALE

940-SM20LDL

WG 20LDL-SM

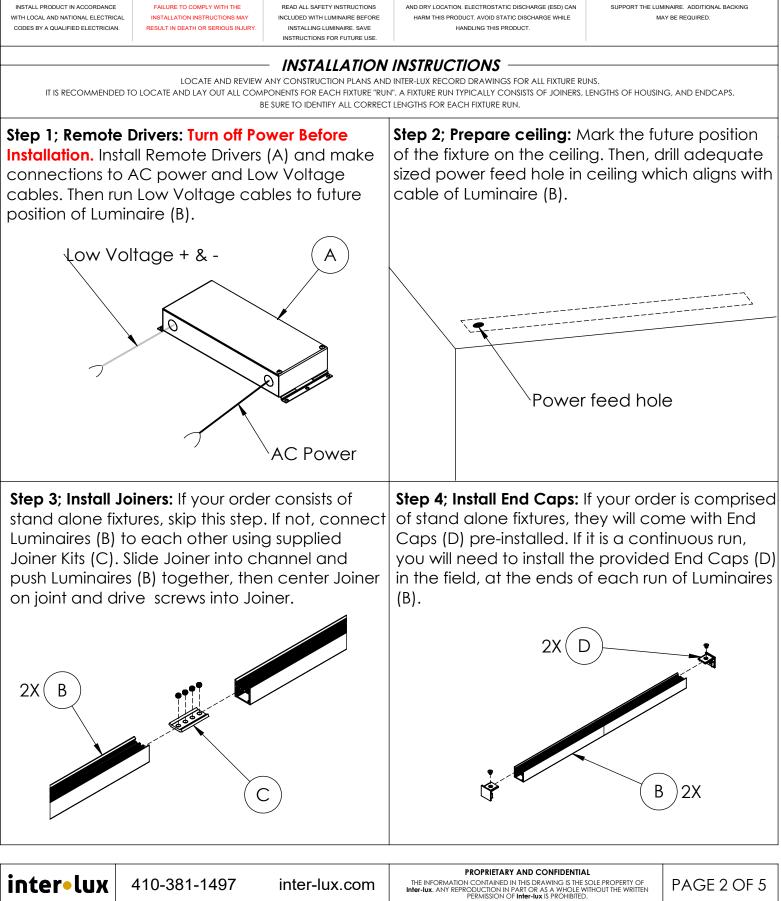

Inter-lux reserves the right to make changes to this product and related installation instructions at any time without prior notice



FAILURE TO COMPLY WITH THE

INSTALLATION INSTRUCTIONS MAY

RESULT IN DEATH OR SERIOUS INJURY

Inter-lux reserves the right to make changes to this product and related installation instructions at any time without prior notice.

ISTALL PRODUCT IN ACCORDANCE

WITH LOCAL AND NATIONAL ELECTRICAL

CODES BY A QUALIFIED ELECTRICIAN.

Whitegoods 20 Linear Surface



CAUTION: THIS IS AN ELECTRONIC DEVICE. CARE MUST BE TAKEN DURING STORAGE AND HANDLING. STORE IN A CLEAN, COOL AND DRY LOCATION. ELECTROSTATIC DISCHARGE (ESD) CAN HARM THIS PRODUCT. AVOID STATIC DISCHARGE WHILE HANDLING THIS PRODUCT.


CAUTION: INTER-LUX IS NOT RESPONSIBLE FOR THE STRUCTURAL INTEGRITY OF THE BUILDING TO SUPPORT THE LUMINARE. ADDITIONAL BACKING MAY BE REQUIRED.

DRAWING NOT TO SCALE

940-SM20LDL

WG 20LDL-SM

Step 5; Installation of Mounting Hardware: There are four methods to install the luminaire with different mounting hardware. These methods are shown below. Proceed with the method specified for this project.

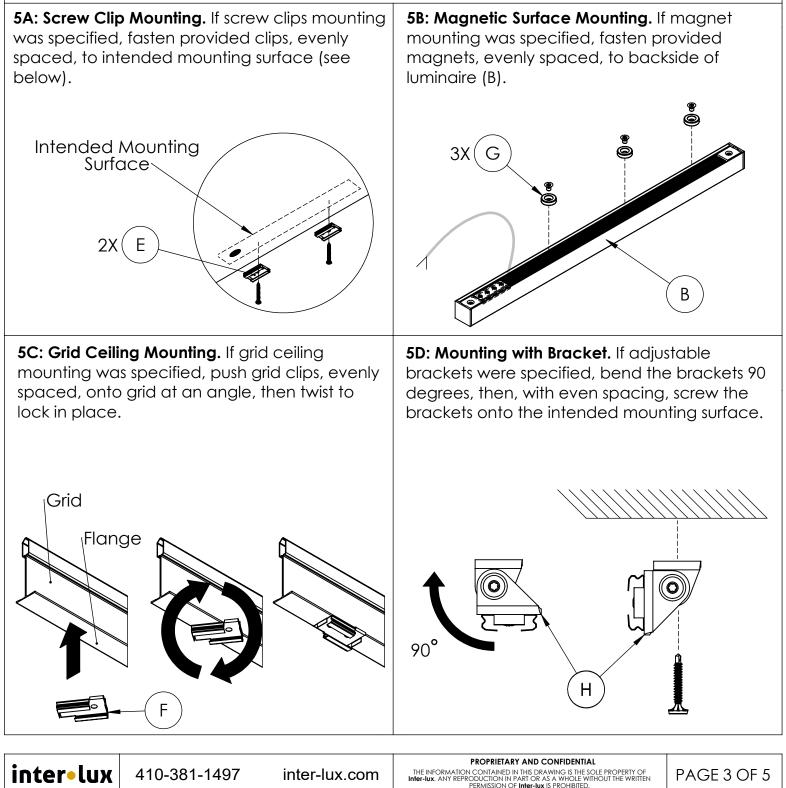



WARNING

FAILURE TO COMPLY WITH THE

INSTALLATION INSTRUCTIONS MAY

RESULT IN DEATH OR SERIOUS INJURY

NSTALL PRODUCT IN ACCORDANCE

WITH LOCAL AND NATIONAL ELECTRICAL

CODES BY A QUALIFIED ELECTRICIAN.

Whitegoods 20 Linear Surface INSTALLATION INSTRUCTIONS



CAUTION: THIS IS AN ELECTRONIC DEVICE. CARE MUST BE TAKEN DURING STORAGE AND HANDLING. STORE IN A CLEAN, COOL AND DRY LOCATION. ELECTROSTATIC DISCHARGE (ESD) CAN HARM THIS PRODUCT. AVOID STATIC DISCHARGE WHILE HANDLING THIS PRODUCT.

CAUTION: INTER-LUX IS NOT RESPONSIBLE FOR THE STRUCTURAL INTEGRITY OF THE BUILDING TO SUPPORT THE LUMINAIRE. ADDITIONAL BACKING MAY BE REQUIRED.

WG 20LDL-SM

Step 6; Installation of Luminaire and testing: The following steps are continuations of the processes started in step 5. Follow the same letter from before to finish the installation of the specified mounting method.

6B: Installation of Luminaire on Ferrous surface. 6A: Installation of Luminaire on Hard Surface. Pull low voltage cables of Driver (A) through After fastening of magnets (G) onto Luminaire (B), pull low voltage cables of Driver (A) through power feed hole, and connect to luminaire (B) wires. Then, gently press the Luminaire (B) onto the power feed hole, and connect to Luminaire (B) wires. Then, gently attach magnets to Screw Clips (E) until they snap together surface as shown below. Finally, power luminaire properly. Finally, power luminaire (B) to ensure proper operation. (B) to ensure proper operation. В G 6C; Installation of Luminaire on Grid Ceiling. 6D; Installation of Luminaire on Adjustable Pull low voltage cables of Driver (A) through Bracket. Pull low voltage cables of Driver (A) power feed hole, and connect to luminaire (B) through power feed hole, and connect to wires. Then, gently press the Luminaire (B) onto luminaire (B) wires. Then, gently press the Grid Clips (F) until they snap together properly. Luminaire (B) onto bracket clips (H) until they Finally, power luminaire (B) to ensure proper snap together properly. Finally, power luminaire operation. (B) to ensure proper operation. Grid н В

inter•lux	410-381-1497	inter-lux.com	PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF Inter-lux. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF Inter-lux S PROHIBITED.		PAGE 4 OF 5
*Inter-lux reserves the right to make changes to this product and related installation instructions at any time without prior notice.				DRAWING NOT TO SCALE	940-SM20LDL

