


installation instructions 20 linear suspended:

SP20LED-(mm)

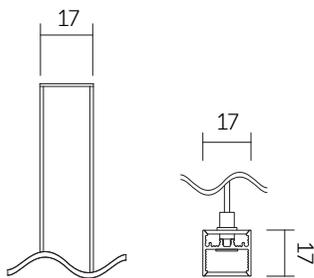


- ⚠ Ensure all mains power is switched off at source.
- ⚠ Do not attempt installation or maintenance on electrically live product.
- ⚠ Installation and maintenance to be carried out only by a qualified electrician or electrical contractor.



installation instructions for plasterboard and panel ceilings


①

Cut out Ø30mm hole and feed through low voltage power cable.

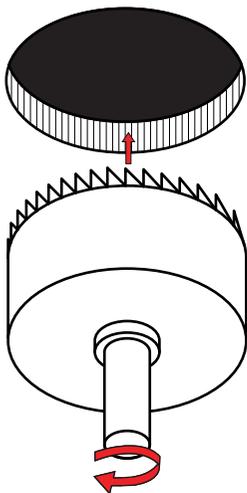


②

Wire 2 pole connector using diagram below.

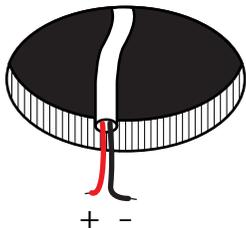


③

Connect power cable from driver to fixture using splices. Feed cable and fixture up through the cut out.

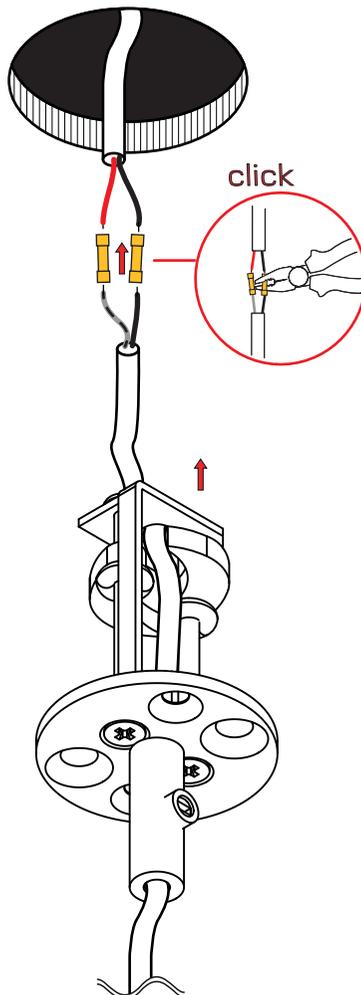


④

Secure fixture to the ceiling by tightening the 2no. captive screws. This will lower and lock pins in position within the ceiling. Maximum ceiling thickness of 35mm.

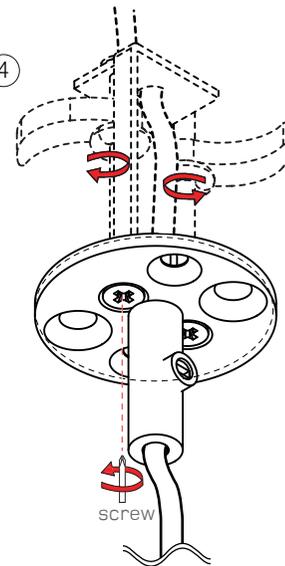


⑤

Loosen screw on side of fixture to release tension on the cable. Determine desired length of cable before tighten screw to secure cable.

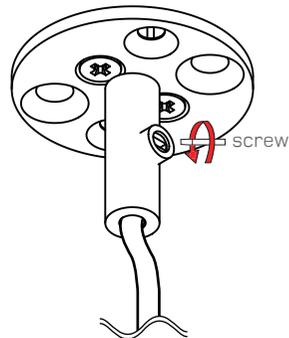


plaster-in instructions

Plaster the fixture and the surround 500mm to create an even gradient. Ensure the exposed part of the fixture is protected throughout installation.

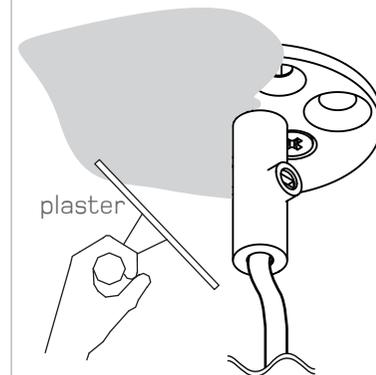

bezel instructions


Bezel trim is secured and held in place by lower part of the fixture once cable length has been defined. Insert the Bezel Trim (B) between the the ceiling connector (A) and the cable restrain holder (C).

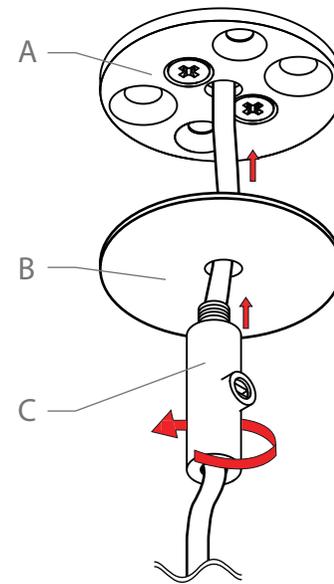

installation instructions for concrete ceilings


①

Create a $\varnothing 25$ mm conduit cast in the concrete and feed through low voltage power cable.

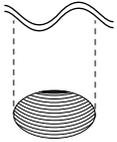


②

Wire 2 pole connector using diagram below.

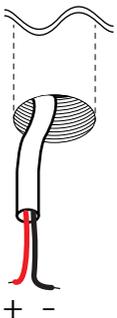


③

Connect power cable from driver to fixture using splices. Feed cable and fixture up through the conduit.

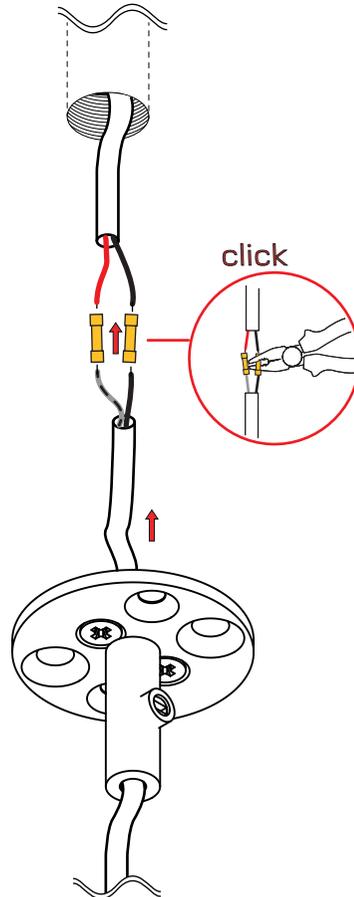


④

Secure fixture to concrete ceiling by fixing 2 screws (not free issued) into the concrete through the circular plate.

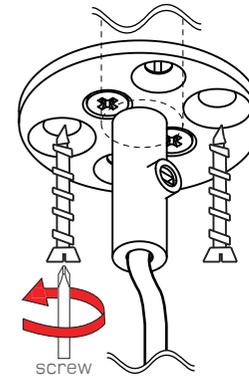


⑤

Loosen screw on side of fixture to release tension on the cable. Determine desired length of cable before tighten screw to secure cable.

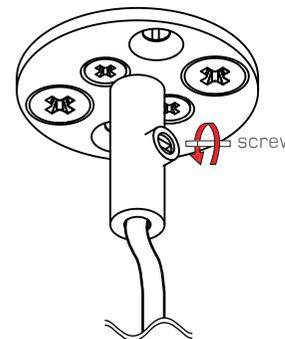

plaster-in instructions

Plaster the fixture and the surround 500mm to create an even gradient. Ensure the exposed part of the fixture is protected throughout installation.

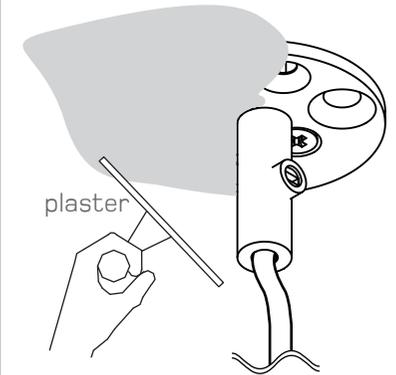

bezel instructions

Bezel trim is secured and held in place by lower part of the fixture once cable length has been defined. Insert the Bezel Trim (B) between the ceiling connector (A) and the cable restrain holder (C).

